



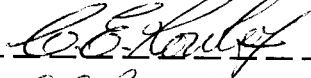


Druck

PRESSURE MEASUREMENT

DPI 705 DIGITAL PRESSURE INDICATOR USER GUIDE K214

Prepared by Bob Lee
Druck Publications Department
Issue Date 25th February 1998

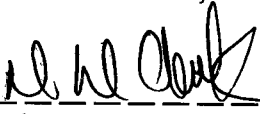Development Dept. Approved for technical accuracy	Product Management Commercial approval
Signature: 	Signature: 
Name: N W CLARK	Name: M. SHELTON
Date: 26-2-98	Date: 26-2-98
Publications Dept. Final approval	Signature: 
	Name: C. E. ROWLEY
	Date: 27/2/98

©Druck Limited 1998

This document is the property of Druck Limited and may not be copied or otherwise reproduced, communicated in any way to third parties, nor stored in any Data Processing System without the express written authority of Druck Limited.

Druck Limited, Fir Tree Lane, Groby, Leicester LE6 0FH, England. Tel: (0116) 231 4314 Fax: (0116) 287 5022

K214 Issue No. 1

Druck DPI 705 Digital Pressure Indicator

User Guide



Specification

Accuracy:

Combined non-linearity, hysteresis and repeatability $\pm 0.1\%FS$

Temperature effects: Span $\pm 0.02\%rdg/^{\circ}C$

Zero $\leq 1 \text{ bar } \pm 0.05\%FS/^{\circ}C$ (absolute ranges only)

..... $> 1 \text{ bar } \pm 0.02\%FS/^{\circ}C$ (absolute ranges only)

Maximum safe working pressure 2 x FS

Pressure connector 6 mm o/d and 4 mm i/d hose or G1/8 female thread

Environmental IP54

Electrical Power Supply 3 x 1.5 V alkaline size AA



This pressure indicator meets the essential protection requirements of the relevant EEC directives.

Electrical safety BS EN 61010 as applicable

Electromagnetic compatibility EN50081-1 (emissions)

..... EN50082-2 (immunity)

Safety



This symbol, on the pressure indicator, indicates that the user should refer to the user guide or manual.

Pressure Do not apply pressure greater than the maximum safe working pressure.

Batteries Remove batteries from the pressure indicator immediately when discharged and before storage.

Dispose of batteries in accordance with local regulations and battery manufacturers' instructions.

When storing and transporting batteries make sure they cannot be short circuited.

Cleaning Clean the pressure indicator with a damp cloth.

Software Version

This guide contains operating instructions for pressure indicators with software version 1.XX. Further changes to the pressure indicator's software may require a change to the operating instructions and an issue number change of the guide.

Calibration

Refer to the Calibration Instructions Druck publication K215 or contact the nearest Druck Subsidiary or Agent.

Druck Limited, Fir Tree Lane, Groby, Leicester, LE6 0FH, England

Tel: +44 (0) 116 231 7100







Fax: +44 (0) 116 231 7103


Email: sales@druck.com

Internet <http://www.druck.com>

Druck DPI 705 User Guide

Display Symbols

	Batteries are low, replace observing polarity shown on case		Filter applied (10 reading rolling average)
	Displayed reading - maximum value	TARE	Tare applied
	Displayed reading - minimum value	A (flashing)	Alarm - pressure value more than alarm setting
	Displayed reading - leakage (per minute)		Leak test in progress (count down)

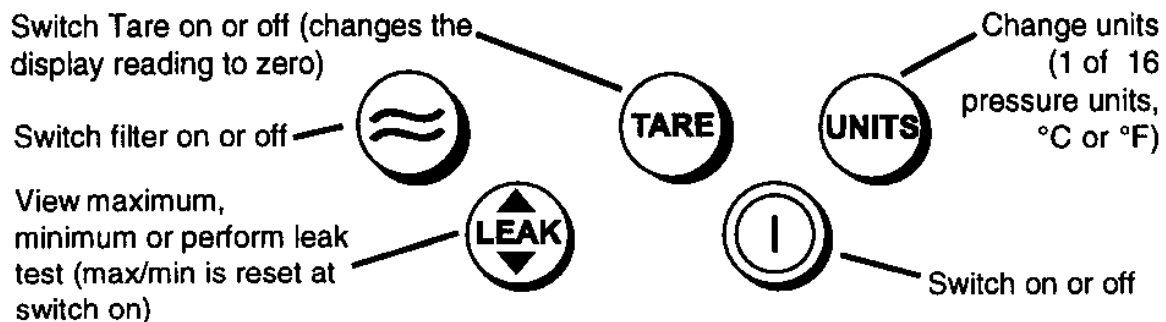


Operation


TIME OUT

If a key is not pressed within 10 minutes then the instrument times out and switches off. To disable this automatic time out, hold the LEAK key when switching on the pressure indicator.

LEAK TEST

To perform a leak test, press the LEAK key 3 times. The  symbol flashes on the display with the number 60. To start the leak test press the LEAK key again. The instrument counts down 60 seconds displaying the leakage at the end of the 60 second period. Press the LEAK key at any time during the leak test to quit and return to normal measurement.

ZERO

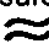A zero should be performed on gauge and differential instruments before measuring pressure. To perform a zero: Open all pressure ports to atmospheric pressure. Press the  and TARE keys together, the display briefly shows ZER0 and the instrument calculates a new zero.

Note: A zero can only be performed on absolute pressure indicators if a vacuum is first applied to the pressure port.

Alarm

A single alarm can be set to operate when the displayed pressure value rises above the alarm setting. The alarm causes the display to flash and a beeper to sound for one minute. Pressing TARE and UNITS keys together displays the alarm value, pressing the FILTER key increases the alarm value, pressing the UNITS key decreases the alarm value. When the display shows the required alarm value, press the TARE key to set the alarm.

Print Instructions K214

This publication has been created in PageMaker 6.5 as follows:

shortguide.P65

K214fp.P65

Illustrations

keys.eps

time.eps


clock.eps

batt.eps

filter.eps

- This document is part of the six-lingual publication for the world market, comprising English (this document), French, German, Italian, Spanish and Portuguese.
- This document is to be printed in black and PMS 313 on white, as supplied on disk.
- Paper to 285 gsm matt art - laminated.
- Folded - as detailed below:

1	3	5	7	9	11
---	---	---	---	---	----

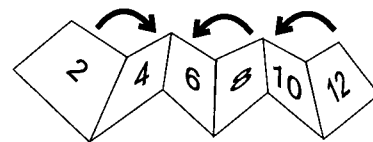

backed by ↓

2	4	6	8	10	12
---	---	---	---	----	----

THIS PUBLICATION IS PRINTED EXTERNALLY, THIS HARDCOPY IS NOT TO BE USED AS CAMERA COPY.