



Description

Additional

Reviews

Add a new Current Sensor to your Transmitter to measure energy from an additional circuit. It is compatible with the Transmitter of the Energy Sensor Kit (this is also included in all our monitors).

If you are operating a 3-Phase with up to 90A/phase supply then you will require two of these sensors.

NOTE: Please be aware that the Transmitter will add all of the Current Sensor measurements before sending data to the Wireless Electricity Monitors or Engage Hub. If you want to monitor a circuit independently you need to purchase an Energy Sensor Kit instead.

Features

- Sensor Voltage Range: 110V-300V
- Measuring Current: 50mA - 95A
- Diameter: max. 12mm

How it works

All transmitters come with three spaces for sensors. Just look on the underside of the Transmitter, take out the rubber cover of one of the spare spaces and plug in your additional sensor. Then attach it the same way as the previous one.